Roller Rack

Montage:
1. Befestigen Sie den Konus (1) mit der Schraube (2) an den Platten (3).
2. Montieren Sie die beiden Platten (3) mit den Schrauben (4)am Hauptrahmen (5).
Hinweis: Ziehen Sie die Schrauben (4) noch nicht fest.
3. Die Aufhängung soll mit dem montierten Roller Rack ausgerichtet werden. Hängen Sie dazu den Roller Rack in die Aufhängung. (s. S. 2)
Hinweis: Achten Sie darauf das der Roller Rack korrekt zum Fahrrad ausgerichtet und sich leicht ein- und aushängen lässt.
4. Ziehen Sie anschließend die beiden Schrauben (4) der Platten an beiden Seiten mit ca. 9Nm fest.

Assembly:
1. Attach the cone (1) to the plates (3) with screw (2).
2. Mount the two plates (3) to the main frame (5) using the screws (4).
Note: Do not tighten the screws (4) yet.
3. The hanger should be adjusted with the mounted Roller Rack. To do this, hang the Roller Rack in the mounting. (see page 2)
Note: Ensure that the Roller Rack is correctly aligned with the bike and can be easily attached and detached.
4. Then tighten the screws (4) of the plates on both sides to approx. 9 Nm.

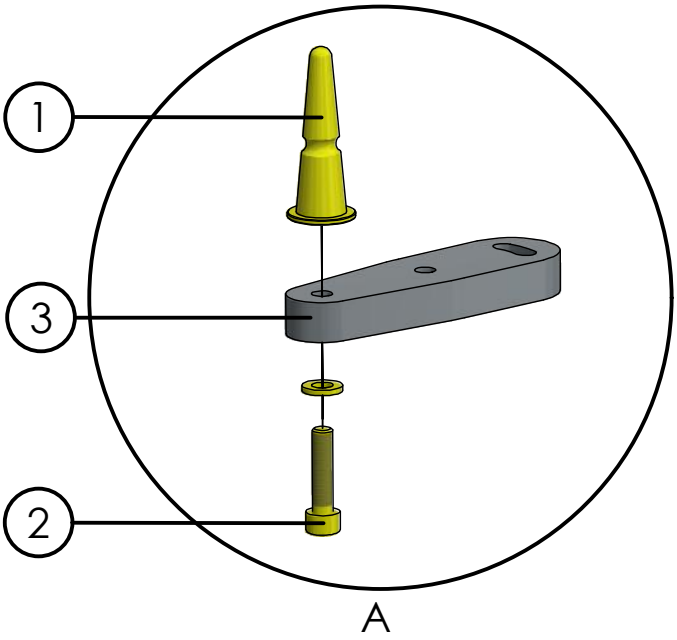

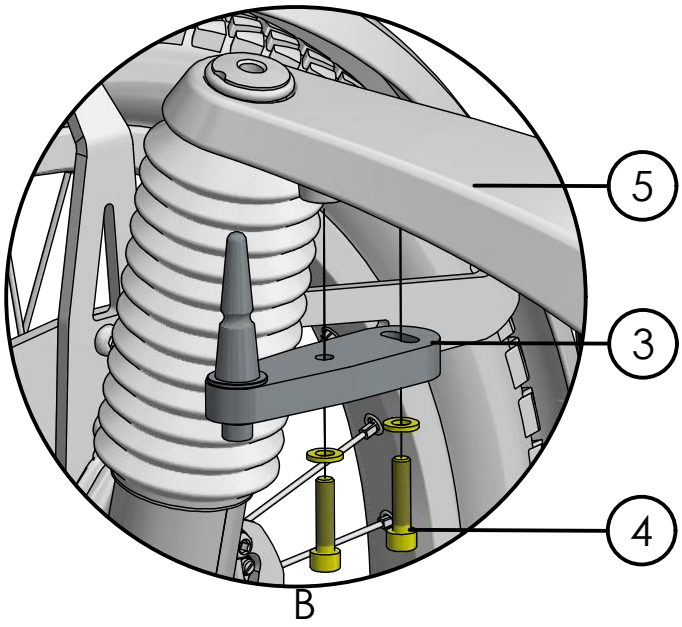

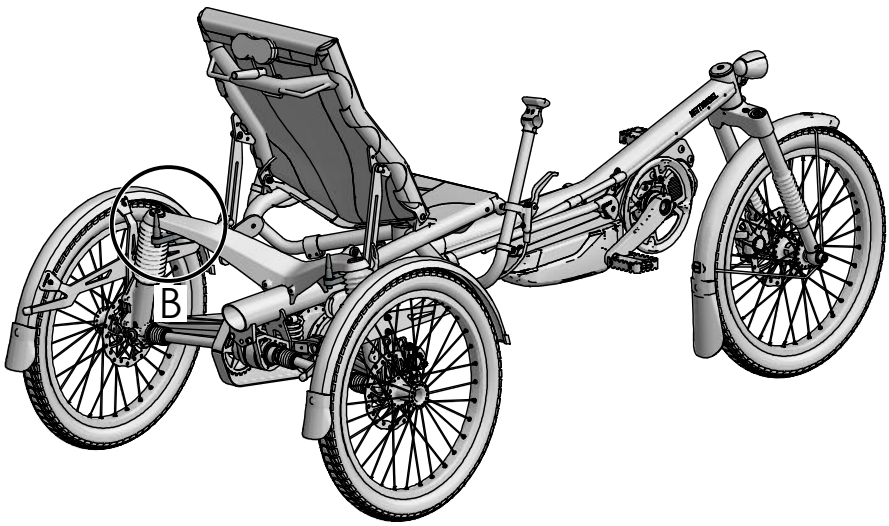

Hiberniastraße 2
45731 Waltrop
Germany
Phone +49(0)2309 / 9377-0
info@hasebikes.com
www.hasebikes.com

Art.: 24879

Roller Rack

Einhängen des ROLLER RACK:
Hinweis: Vergewissern Sie sich zunächst dass die Sicherungsschrauben (1) an der Aufhängung (2) gelöst sind.
1. Positionieren Sie den Roller Rack mit der Aufhängung (2) oberhalb der Konusschrauben (3).
2. Senken Sie anschließend den ROLLER RACK leicht auf die Konusschrauben (3) ab.
Hinweis: Um sicher zu gehen, dass sich der Roller Rack während der Fahrt nicht lösen kann, ziehen Sie die Sicherungsschrauben (1) an.

Aushängen des ROLLER RACK
Sofern die beiden Sicherungsschrauben (1) gelöst sind, können Sie den ROLLERRACK einfach nach oben abnehmen.

Teleskopgriff:
Um den Teleskopgriff herrauszuziehen betätigen Sie den Knopf (4) oben am Griff.

Mounting the ROLLER RACK:
Note: First make sure that the locking screws (1) on the hanger (2) are loosened.
1. Position the roller rack with the hanger (2) above the cone screws (3).
2. Then lower the ROLLER RACK slightly onto the cone screws (3).
Note: Tighten the locking screws (1) to ensure that the ROLLER RACK cannot come loose during the ride.
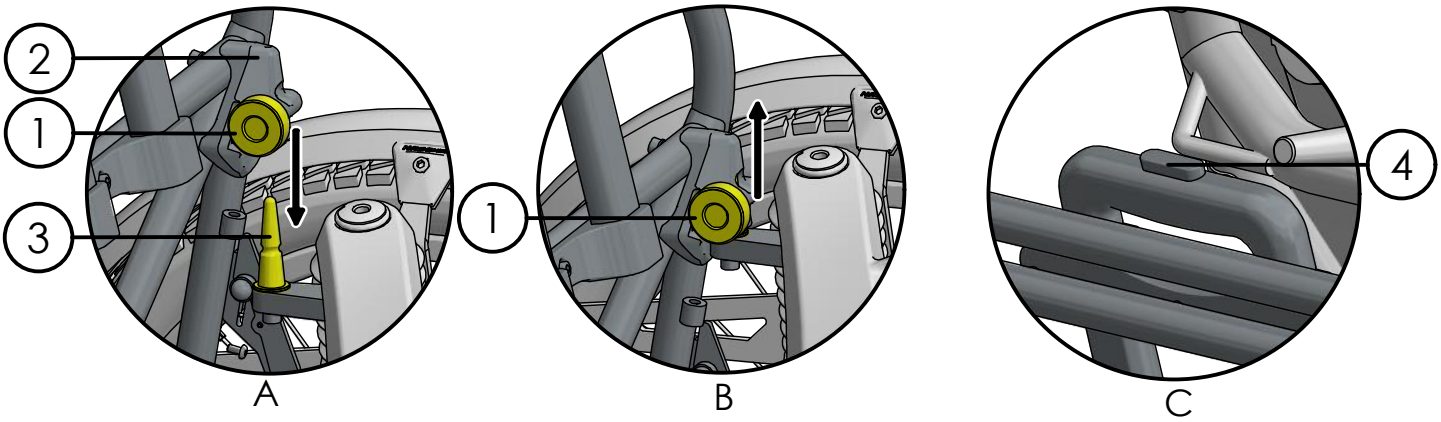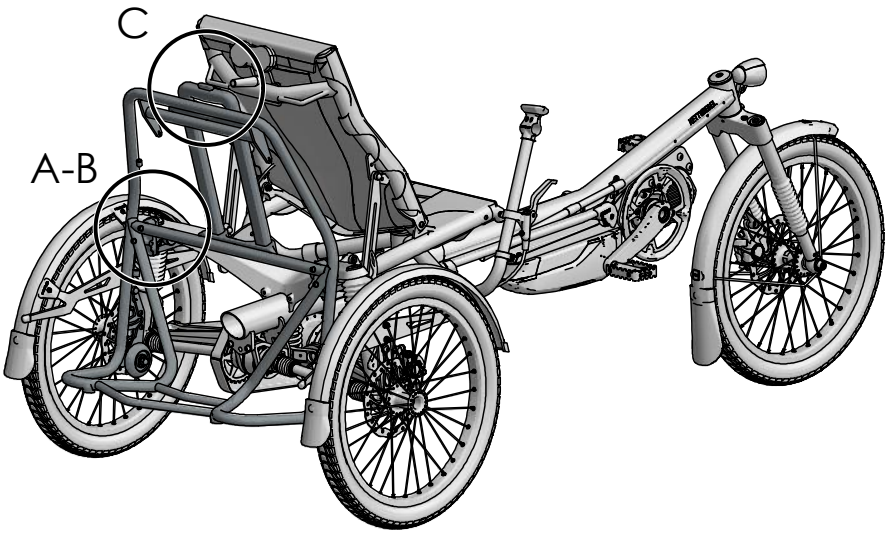
Dismounting the ROLLER RACK:
Once the two locking screws (1) have been loosened, you can simply remove the ROLLER RACK upwards.
Telescopic handle:
To pull out the telescopic handle, press the button (4) at the top of the handle.